



Payment Connect

Instructions for use

Schweiz/EU

25 Monate Garantiebedingungen

25 mois conditions de garantie

25 months warranty conditions



Garantievoorwaarden van JURA Nederland BV	36
JURA Products Ltd warranty conditions	38
Conditions de garantie de JURA France S.A.S	40
Condiciones de garantía de JURA Espresso S.L.U	
Garantivillkor för JURA Sweden AB	
Záruční podmínky společnosti JURA Czech, s. r. o	46
Warunki gwarancji spółki JURA Poland Sp. z o.o.	48
International guarantee for all other countries	

- no Trådløs forbindelse (Bluetooth LE / Wi-Fi): Frekvensbånd 2,4 GHz | Maks. sendeeffekt < 100 mW
- Trådlös anslutning (Bluetooth LE / Wi-Fi): Frekvensband 2,4 GHz | Max. sändningseffekt < 100 mW
- Радиосвязь (Bluetooth LE / Wi-Fi): Диапазон ru частот 2,4 ГГц | Максимальная мощность передачи < 100 мВт

- Rádiové spojení (Bluetooth LE / Wi-Fi): Frekvenční pásmo 2,4 GHz | Max. vysílací výkon < 100 mW
- da Trådløs forbindelse (Bluetooth LE / Wi-Fi): Frekvensbånd 2,4 GHz | Maks., sendeeffekt < 100 mW
- fi kaista 2,4 GHz | Suurin lähetysteho < 100 mW

Proper use

Payment Connect may only be used with specified JURA interfaces. It provides wireless communication between the coffee machine and various accessories (for compatible devices, see jura.com). Use for any other purpose will be deemed improper. JURA cannot accept any responsibility for the consequences of improper use.

Payment Connect at a glance



- 1 LED: Indicates the status of Payment Connect
- 2 Connector: Inserted into the service socket on the coffee machine

Installation

The Payment Connect must be inserted into the coffee machine's service socket. This is usually on the top or back of the machine, beneath a removable cover. If you don't know where the service socket of your coffee machine is, ask your dealer or go to jura.com.

Plug the Payment Connect into the coffee machine's service socket.

The programme item "Payment Connect" appears in the coffee machine's settings.

Connecting to JURA Cool Control

Payment Connect can be used to connect the coffee machine to the JURA Cool Control. This requires Cool Control to also be equipped with Payment Connect. If a device is switched off and then on again, the connection is reestablished automatically.

Resetting Payment Connect to factory settings

If you experience any general problems with Payment Connect (e.g. a connectivity problem), you can reset it to factory settings in the machine settings for your coffee machine (under "Reset Payment Connect").

LFD indicators

LED action	Coffee machine	Cool Control
LED does not	The coffee machine is switched off;	Cool Control is switched off; Payment
light up	Payment Connect is not being supplied	Connect is not being supplied with
	with power.	power.
LED lights up	A connection has been established with	A connection has been established with
	the router.	the coffee machine.
LED flashes	The wireless connection with the router	The coffee machine is switched off; it
(once per second)	(for J.O.E.) has not been configured or the	is not possible to connect to the coffee
	router could not be found.	machine.
LED flashes	Attempting to establish a wireless	Cool Control is not configured with the
(twice per second)	connection (during setup with the	coffee machine.
	router).	

Contact

JURA Elektroapparate AG Kaffeeweltstrasse 10 4626 Niederbuchsiten, Switzerland Tel. +41 (0)62 389 82 33

You can find additional contact details for your country at **jura.com**. Declaration of conformity: jura.com/conformity

This device complies with Industry Canada licence-exempt RSS standard(s) and part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

